

## HPE VRG Voice Commands

---

### COMMON COMMANDS

**HPE VRG** Open HPE Visual Remote Guidance.

**Toggle microphone** Turn microphone on/off.

**Microphone level 25/50/75/100** Increase microphone level.

**Toggle camera** Turn camera on/off.

**Zoom level 1-5** Enlarge camera view incrementally.

**Show About** Show About dialog.

**Close dialog** Close About dialog.

**Open content item** Open the most recently opened content item or the first item in the content list.

**Next item** Open the next content item.

**Previous item** Open the previous content item.

**Close content item** Close the current content item.

**Exit VRG** or **Close VRG** Quit out of VRG application.

### ABOUT DIALOG

**Close about** Close About dialog.

**Close dialog** Close About dialog.

**Open about VRG** Open About dialog.

**Show about** Show About dialog.

### CHAT

**Close chat** Close chat view.

**Close current view** Close this view.

**Enter chat message** Set focus on entry field and opens dictation tool.

**Open chat** Open chat view.

**Select question** Select Question option in Assistant.

**Select image** Select Image option in Assistant.

**Send chat** Post the chat if text is entered in chat entry field.

**Toggle Assistant** Check/uncheck Assistant checkbox in chat.

**Toggle chat** Bring up or removes chat view.

**Toggle translate** Turn text translation on/off.

### GENERAL

**Application menu** Opens the three lines menu.

**Close dialog** Close any popup dialog.

**Close menu** Close the three dots menu.

**Close menu** Close the three lines menu.

**Enter room** If there is text in the Room key field, enter room with that key.

**Exit room** Leave current room.

**Exit VRG** or **Close VRG** Quit out of VRG application.

**HPE VRG** Open HPE Visual Remote Guidance.

**More menu** Open the three dots menu.

**Open About VRG** Open About page.

**Register device dialog** Open Try VRG now web page.

**Room key** Focus on room key entry field. Keyboard or input mechanism is opened.

**Settings** Opens Application menu Settings page.

**Show About** Open About page.

**Upload logs** Open the Upload logs page.

### INVITE TO ROOM

**Cancel** Close Invite to room page.

**Close dialog** Close Invite to room page.

**Email address** Bring email address entry field to focus and open a keyboard or input mechanism.

**Next** Validate address in address field and send invite to that address.

### LOGIN

**Cancel** Close Login settings view.

**Close** Close Login settings view.

**Host** Bring focus to Host field, keyboard or input mechanism is opened.

**Port** Bring focus to Port field, keyboard or input mechanism is opened.

**Settings** Open Login settings view.

**Upload logs** Open the Upload logs page.

### ROOM – AUDIO

**Microphone level 25/50/75/100** Increase microphone level.

**Next audio output** Cycle through Automatic, Default, Speakerphone, or Bluetooth for audio output.

**Toggle microphone** Turn microphone on/off.

**Toggle speaker** Turn speaker on/off.

### ROOM – CAMERA

**Close more camera** Collapse video toolbar when Camera is enabled.

**Open more camera** Expand video toolbar when Camera is enabled.

**Scan QR code** Starts the camera for QR scanning.

**Toggle camera** Turn camera on/off.

**Toggle face blurring** Toggle facial blurring on/off.

**Toggle resolution** Toggle resolution low/high.

**Take snapshot** Take the camera snapshot.

**Toggle snapshot size** Toggle snapshot size Normal/Maximum.

**Toggle translate** Toggle translate on/off.

**Zoom level 1-5** Enlarge camera view incrementally.

### ROOM - LIST VIEW

**Enter room** If there is text in Room key field, enters the room with that key.

**Enter with key** Use a key to enter the room.

**Quick key** Generate a quick key for the room.

**Room key** Focus on room key entry field. Keyboard or input mechanism opens.

### ROOM – TASK LIST

**Go to step <step number>** Display step number specified.

**Next Step** Moves to next step.

**Previous Step** Moves to previous step.

Continues on next page

## ROOM – GENERAL

- Close content** Close currently open content item.
- Close content item** Close the current content item.
- Close content list** Close the content list view.
- Close current view** Close current view in Chat view, Content list view or People list view.
- Close menu** Close 3 dots menu.
- Exit room** Close current room and returns to room list view.
- Generate key** Create a quick key to invite other users to room.
- Go back** Navigate content list to go back one folder.
- Maximize video** Make own video full screen.
- Minimize video** Make own video thumbnail size.
- More menu** Open 3 dots menu in the room.
- Next item** Open the content item that comes after the current content item.
- Next view** If multiple views are open (videos, content items), brings the next thumbnail view to full-screen mode and makes current view a thumbnail.
- OK Greenlake** Start Assistant request. If Speech Recognition is available, the feature is started, else the chat view is opened with Assistant option checked.
- Open content** Opens the content list view.
- Open content item** Open the most recently opened content item or the first item in the content list.
- Open content list** Open the content list view.
- Pause recording** Pause the recording.
- Previous item** Open the content item that comes before the current content item.
- Previous view** If multiple views are open (videos, content items), brings the previous thumbnail view to full-screen mode and makes current view a thumbnail.
- Stop recording** Stop recording.

## ROOM – SETTINGS

- Close Settings** Closes settings dialog.
- Close dialog** Closes settings dialog.
- Open VRG Settings** Opens Settings dialog.
- Show connection** If network health bars are shown on toolbar, room server/proxy will display in Info Msg bubble.
- Toggle ringtone** Changes the ringtone for incoming chat messages.
- Toggle network health** Toggles display of network health metrics on/off.

## ROOM – MORE MENU

- Select About** Open About page.
- Select Chat** Toggle chat view.
- Select Invite to room** Open Invite to room dialog.
- Select People** Open people list view.
- Select Content** Open content list view.
- Select Quick key** Generate a quick key for the room.
- Select Start recording** Start recording.
- Select Stop recording** Stop recording.
- Select Scan QR code** Open camera and attempts to scan a QR code.
- Select Share screen** Start screen share.
- Select Stop sharing screen** Stop screen share.
- Select Settings** Open Settings page.
- Select Upload logs** Open Upload logs page.
- Select Exit VRG** Exit VRG

## SETTINGS DIALOG

- Allow peer to peer networking** Toggles the corresponding switch on the settings page.
- Allow UDP networking** Toggles the corresponding switch on the settings page.
- Auto play audio for tasks** Automatically plays audio when task step is opened.
- Close dialog** Closes settings dialog.
- Enhanced camera** Toggles advanced camera capabilities on/off.
- HD video** Toggles resolution low/high.
- Max. snapshot resolution** Turns the camera's maximum resolution on/off.
- Message duration** Changes on-screen message duration between 3, 5, 10, 15, 20 and 30 seconds.
- Play chat Sound** Toggles ringtone.
- Select language** Opens the language picker.
- Show network health** Turns health settings on/off.
- Show QR scan button** Displays QR Scan button in room.
- Show snapshots automatically** Automatically displays snapshot as taken.
- Translate chat** Toggles text translation.
- Upload new content to daily folder** Moves new content to a daily folder.